



External Wiring >

External Wiring >

Solenoid connections shown are for example. The location of the RED solenoid wire will vary with the type system you have. The RED wire will be connected to the "L" terminal for Fail-Lock and to the "S" terminal for Fail-Safe operation.

XIS Controls		
Title Robot - Burle - Philips STG Control Upgrade		
Size B	Document Number PUPKIT	Rev
Date: Sunday, April 04, 2010	Sheet 1	of 1